



Steps

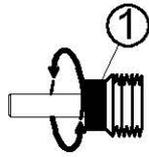


( Picture 1 )

- 1.Ensure to tighten the pin nut ① before using.  
( see picture 1 )  
(※ Loosen the pin nut ① for pin replacement )

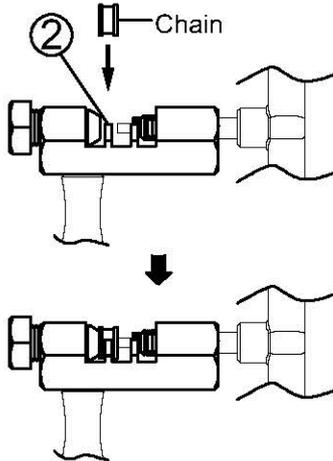


( Picture 2 )

- 2.Place the chain on the chain breaking cradle ②.  
( see picture 2 )

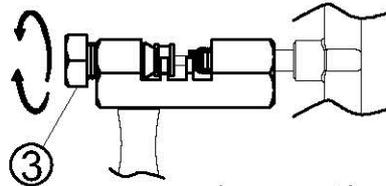

( Picture 3 )

- 3.Turn the bolt ③ to secure the chain then start chain breaking or assembly. ( see picture 3 )

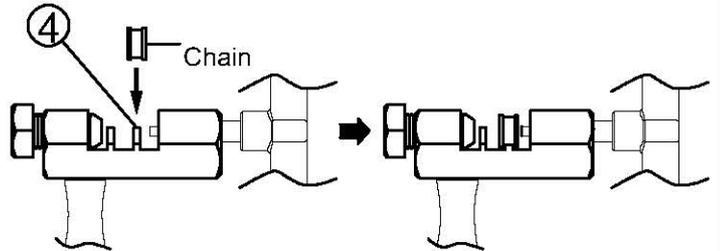


( Picture 4 )

- 4.Place the chain on the chain adjusting cradle ④ for rivet loosening if necessary. ( see picture 4 )

⚠ Do not apply excessive force for adjusting to avoid chain adjusting cradle ④ damaged


⚠ TB-3355 suits for 8 to 10 speed and 3/32" to 3/26" chains

Steps

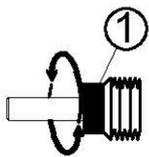


( Picture 1 )

- 1.Ensure to tighten the pin nut ① before using.  
( see picture 1 )  
(※ Loosen the pin nut ① for pin replacement )

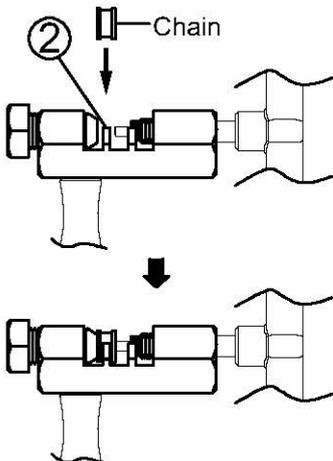


( Picture 2 )

- 2.Place the chain on the chain breaking cradle ②.  
( see picture 2 )

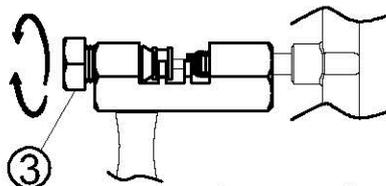

( Picture 3 )

- 3.Turn the bolt ③ to secure the chain then start chain breaking or assembly. ( see picture 3 )

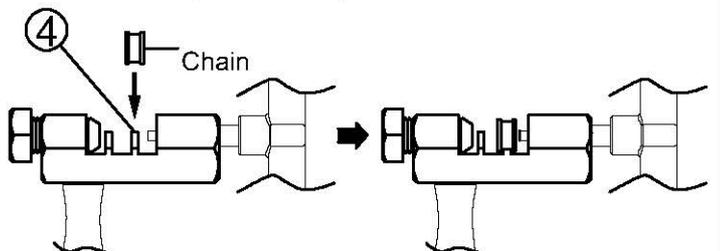

( Picture 4 )

- 4.Place the chain on the chain adjusting cradle ④ for rivet loosening if necessary. ( see picture 4 )

⚠ Do not apply excessive force for adjusting to avoid chain adjusting cradle ④ damaged

⚠ TB-3355 suits for 8 to 10 speed and 3/32" to 3/26" chains