


## 1 Parts description

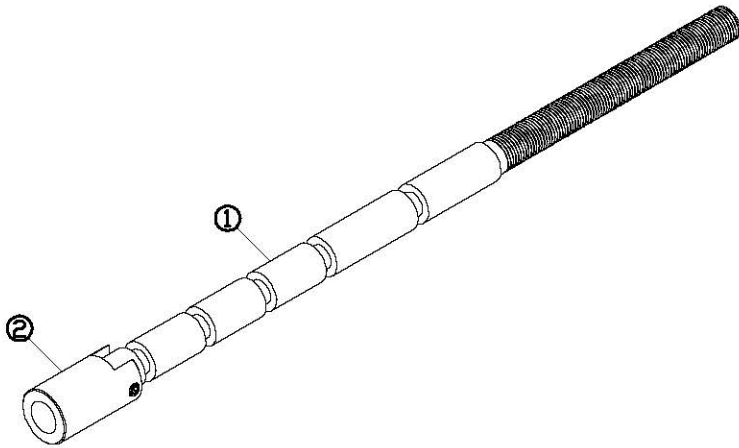

NO.	PART	Q'TY
①	Extender	1
②	Connector	1


 For extending TB-1935 only

## 2 Assembly

1. Tighten the connector ② with center column (TB-1935). (see picture 1)
2. Put the center column through the head tube and place the bearing cup press on it. (see picture 2)
3. Tighten TB-1935 body onto the extender ①. (see picture 2)
4. Fix the under bearing cup press on center column by using under holder.

## 3 Instruction


1. Make sure the extender ① and center column are tightened before operating.

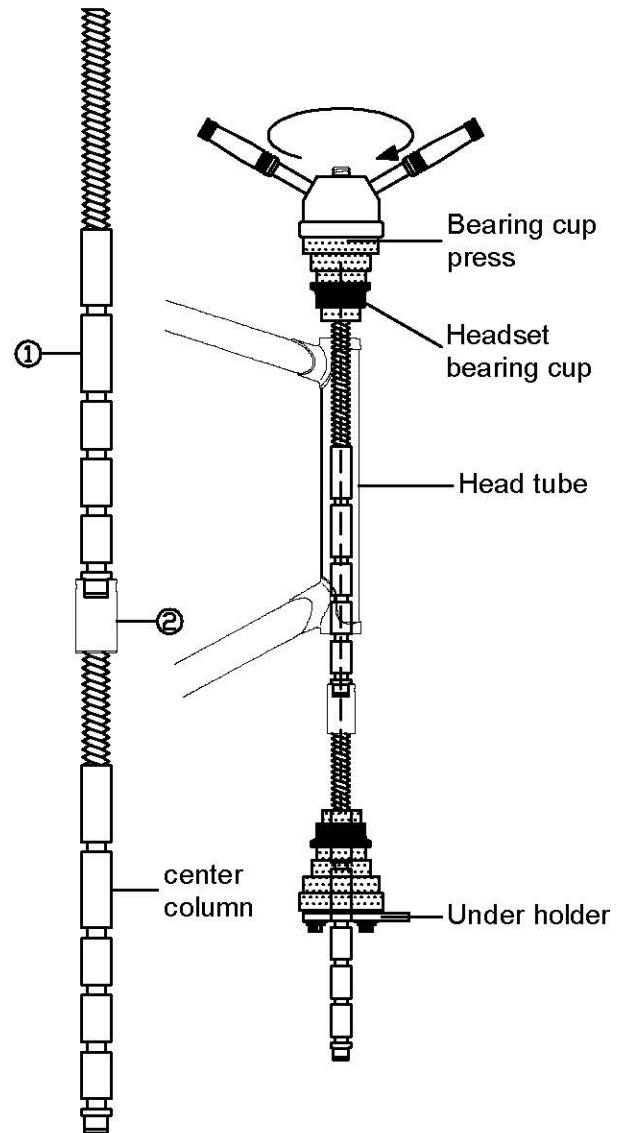

(Picture 1)

(Picture 2)

## 1 零件明細

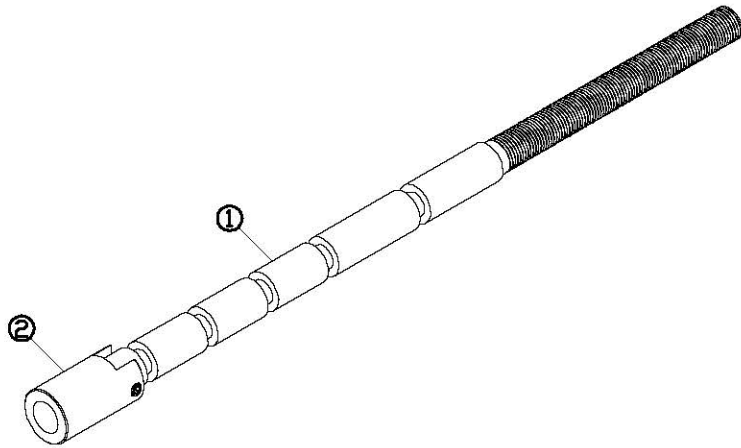

編號	名稱	數量
①	延長柱	1
②	連結器	1

⚠ 請搭配TB-1935使用

## 2 組裝步驟

1. 將TB-1935所附中心柱鎖入連結器②。(如圖一所示)
2. 將組裝完成的中心柱穿過頭管，將五層襯套穿過中心柱。(如圖二所示)
3. 將TB-1935主體鎖入延長柱①。(如圖二所示)
4. 利用下固定片將五層襯套固定於中心柱上。

## 3 使用說明

1. 使用前請再次檢查延長柱①與中心柱是緊密地結合在一起。

