



Steps

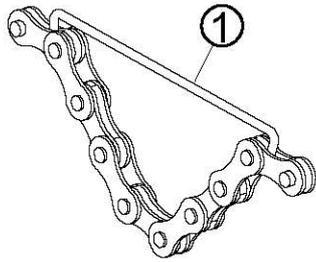

( Picture 1 )



1. Hook the chain hook ① on the chain as picture.  
( see picture 1 )

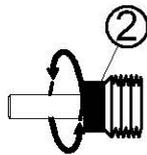

( Picture 2 )

2. Ensure to tighten the pin nut ② before using.  
( see picture 2 )  
( ※ Loosen the pin nut ② for pin replacement )


⚠ TB-3370 suits for 8 to 10 speed chains

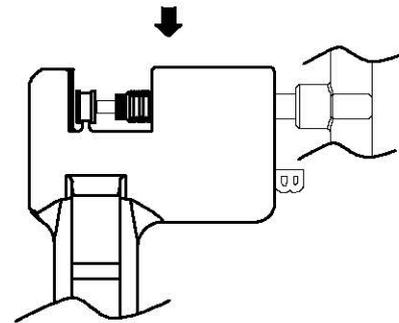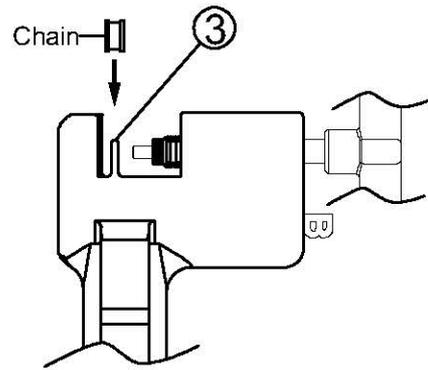

( Picture 3 )


3. Place the chain on the cradle ③ then start  
chain breaking or assembly. ( see picture 3 )

Steps

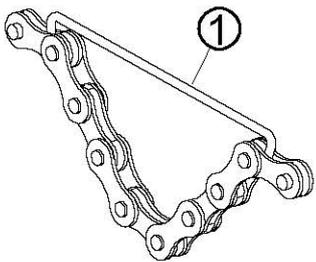

( Picture 1 )



1. Hook the chain hook ① on the chain as picture.  
( see picture 1 )

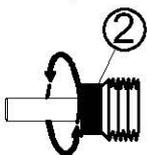

( Picture 2 )

2. Ensure to tighten the pin nut ② before using.  
( see picture 2 )  
( ※ Loosen the pin nut ② for pin replacement )

⚠ TB-3370 suits for 8 to 10 speed chains

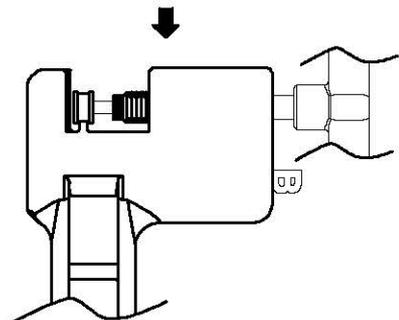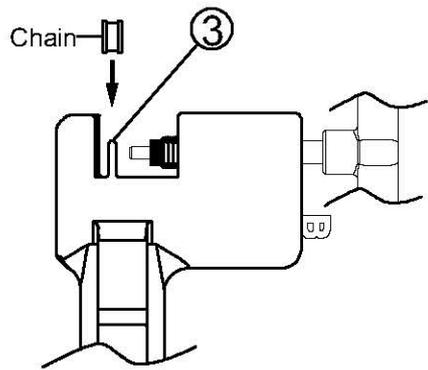

( Picture 3 )

3. Place the chain on the cradle ③ then start  
chain breaking or assembly. ( see picture 3 )